



# Slink attaching pilot chute to bridle

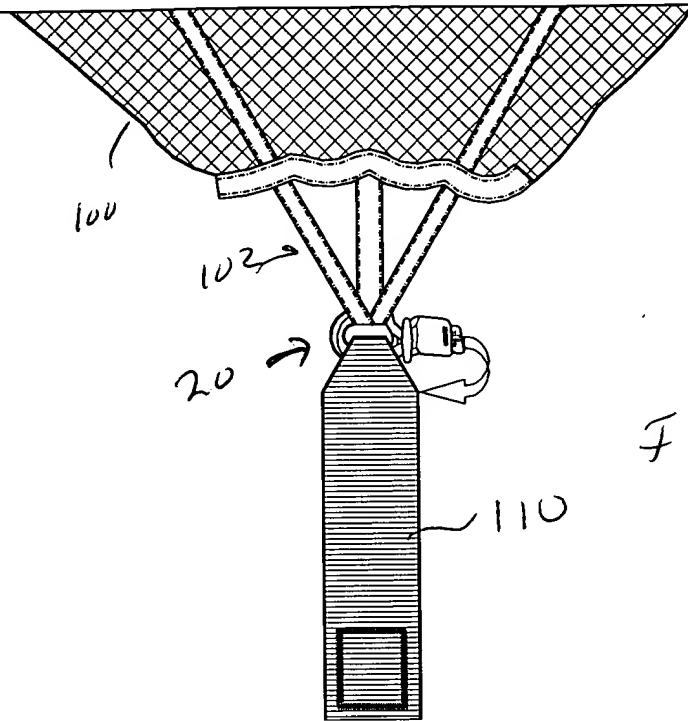


Figure 14

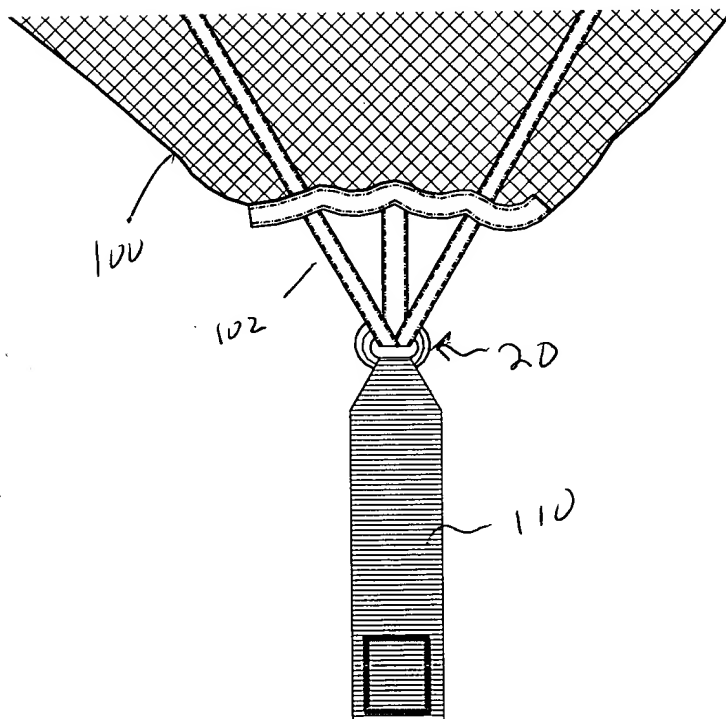


Figure 15



**Slink attaching PCA (pilot chute attachment) to bridle**

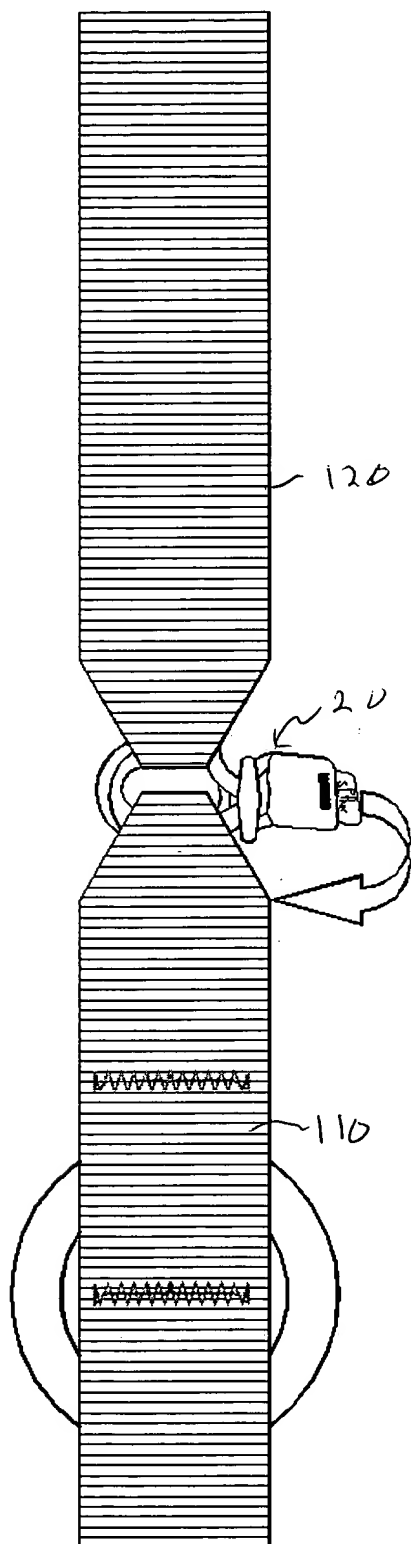


Figure 16

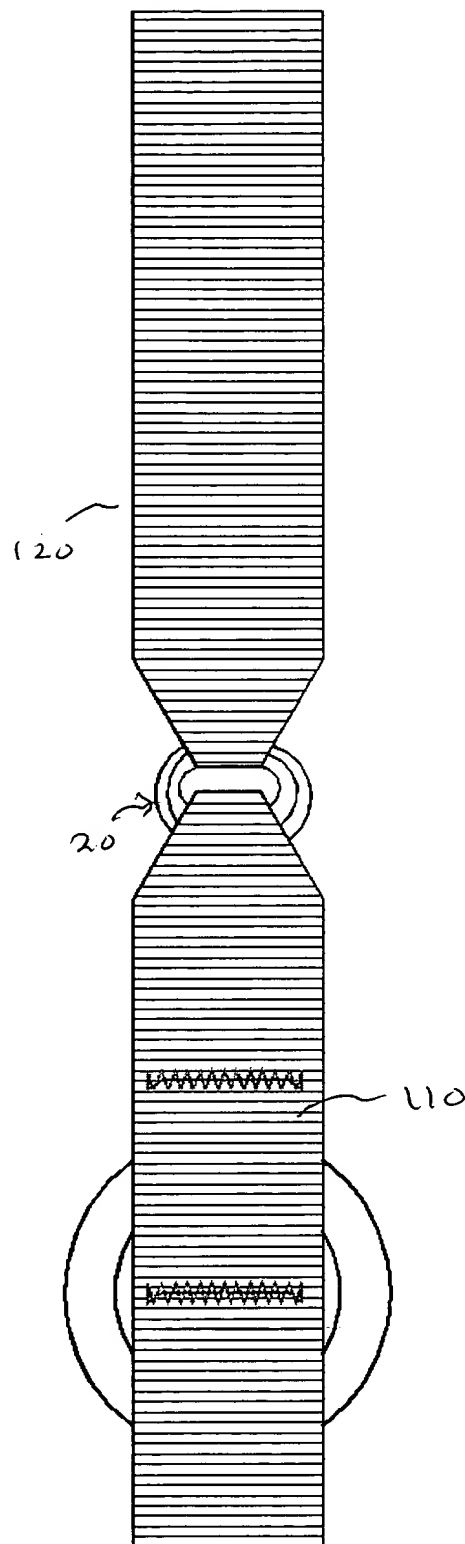


Figure 17